


SLO – krmiljenje frekvenčnega pretvornika z zunanjim potenciometrom in stikalom: **Siemens MicroMaster 430**

Osnovna vezalna shema in pogoji delovanja

Nastavitve parametrov

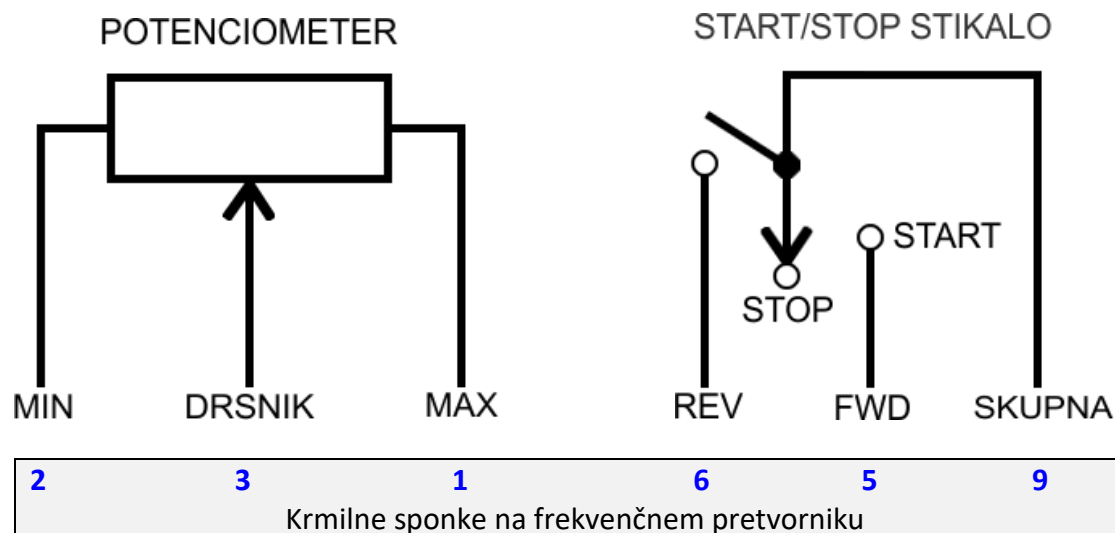

- vrednost potenciometra (linearna karakteristika, najmanj 0.5 W): $\geq 4.7 \text{ k}\Omega$
- med sponki 2 in 4 je potrebno vstaviti prevezavo
- DIP stikalo 1 (levo od krmilne sponke 18) mora biti v položaju OFF (dol)
- z REV stikalom se izvede spremembo smeri vrtenja osi elektromotorja

Po ponastavitvi parametrov na tovarniške vrednosti (P0010 -> 30 in P0970 -> 1) je potrebno spremeniti naslednje parametre:

- definicija reference: P1000 -> 2
- definicija START/STOP: P0700 -> 2
- MIN izhodna frekvenca: P1080
- MAX izhodna frekvenca: P1082 in P2000 (analogni vhod)
- čas pospeševanja: P1120
- čas pojemanja: P1121
- P1110 -> 0



SIGI elektronika, Žiga Divjak s.p.
Cesta 7/5
1310 Ribnica


www.sigi-elect.si
sigi@sigi-elect.si
sigi.elect@gmail.com

051 344 018 (Matija)
070 638 328 (Žiga)

ENG – variable frequency drive control with external potentiometer and switch (2-wire control): **Siemens Micromaster 430**

Basic wiring diagram and conditions of operation

Parameter settings

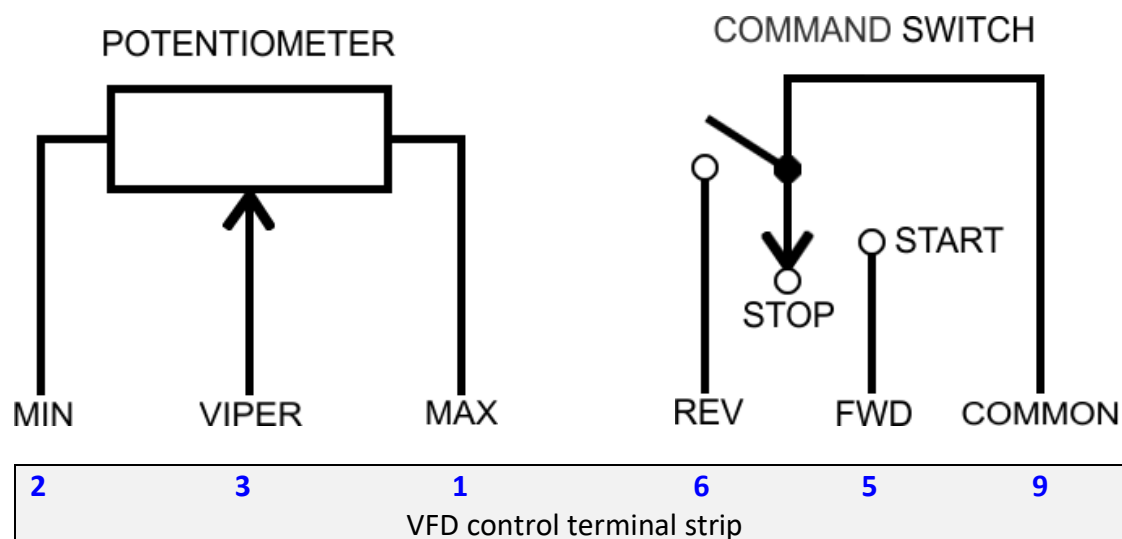

- potentiometer value (linear, at least 0.5 W): $\geq 4.7 \text{ k}\Omega$
- control terminals 2 and 4 must be bridged
- DIP switch 1 (next to the terminal 18) must be in the OFF (down) position
- use the REV switch to change the direction of rotation of the motor shaft

If all VFD parameters are initialized to factory default values (P0010 -> 30 in P0970 -> 1), you only need to adjust the following parameters:

- frequency reference: P1000 -> 2
- START/STOP command: P0700 -> 2
- MIN out frequency: P1080
- MAX out frequency: P1082 & P2000 (analog input)
- acceleration time: P1120
- deceleration time: P1121
- P1110 -> 0



SIGI elektronika, Žiga Divjak s.p.
Cesta 7/5
1310 Ribnica
Slovenia

www.sigi-elect.si
sigi@sigi-elect.si
sigi.elect@gmail.com

00386 51 344 018 (Matija)
00386 70 638 328 (Žiga)